


# Obey™ 4

## Quick Startup Guide

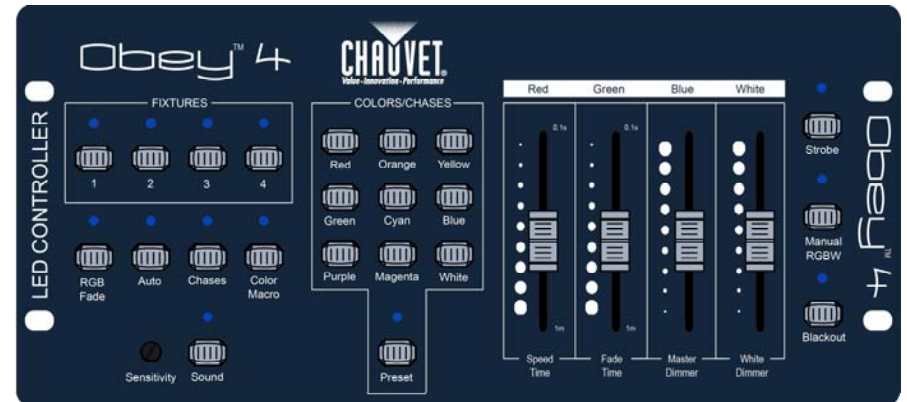

Revision 01b  
CHAUVET®, 2010, All Rights Reserved  
Information and specifications in this User Manual are subject to change without notice.  
CHAUVET® assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual.

  
Value - Innovation - Performance  
5200 NW 108<sup>th</sup> Ave, Sunrise, FL 33351 U.S.A.  
(800) 762-1084 – (954) 929-1115  
FAX (954) 929-5560  
[www.chauvetlighting.com](http://www.chauvetlighting.com)

- Setup**
1. Using the provided power supply, plug the controller into electricity and turn it on.
  2. Plug the light(s) into electricity and turn it/them on.
  3. Connect a DMX cable from the controller to the first light and daisy chain to the other lights.
  4. Use the following DMX starting addresses shown below.
    - a. Fixture 1: DMX 001-DIP switches [1]
    - b. Fixture 2: DMX 005-DIP switches [1, 3]
    - c. Fixture 3: DMX 009-DIP switches [1, 4]
    - d. Fixture 4: DMX 013-DIP switches [1, 3, 4]

- Operation: (Preset Colors)**
1. Select one or more <FIXTURES>.
  2. Press <PRESET> to enable it (LED indicator ON).
  3. Slide <FADE TIME> all the way up (0.1s).
  4. Press one of the 9 preset color buttons to select a color.
  5. Slide <FADE TIME> to adjust the amount of time to change from one color to another color.
  6. Select color as needed.

- Operation: (RGB FADE)**
1. Select one or more <FIXTURES>.
  2. Press <RGB FADE> to enable it.
  3. Slide <SPEED TIME> and <FADE TIME> all the way up (0.1s).
  4. Slide <SPEED TIME> and <FADE TIME> to adjust the amount of time to change from one color to another color.

**Miscellaneous Notes** The Obey™ 4 is designed to be used with 3-channel RGB or 4-channel RGBW/RGBA fixtures.

**BLACKOUT**

To activate blackout, select one or more <FIXTURES> and tap <BLACKOUT>. To activate blackout for all fixtures, adjust <FADE TIME> and double-tap <BLACKOUT>. To disable blackout, select one or more <FIXTURES>, then press <BLACKOUT> once.

**STROBE**

To enable, tap <STROBE> once and adjust <SPEED TIME>. To disable strobe for all fixtures, double-tap <STROBE>. To disable strobe for a single fixture, single-tap <STROBE> and move <SPEED TIME> to 0.1M (fully down).

**Manual RGBW**

To manually control the RGBW levels, select one or more <FIXTURES>, then press <MANUAL RGBW>. The faders may now be adjusted to the desired level(s). *Blackout will be instant in this mode and will not work with <FADE TIME>.*

**SEE USER MANUAL**

This is a Quick Start Guide. It is not intended to be used as a full User Manual. Please see the User Manual for a full set of safety warnings, disclaimers, instructions and specifications.

*It's Green Thinking*

**Contact Us**

**General Information**

CHAUVET®  
5200 NW 108<sup>TH</sup> Avenue  
Sunrise, FL 33351  
Voice: (954) 929-1115  
Fax: (954) 929-5560

**World Wide Web**

[www.chauvetlighting.com](http://www.chauvetlighting.com)